



ANALIZA BIAŁEK



100009212

## Laboratory of Analysis

**Client:** EP-COMPANY  
**Order number:** 100009212  
**Name:** TRE  
**Number of samples:** 1 string bag

**Batch number:** -----  
**Received date:** 2025-08-06  
**Start date:** 2025-08-14  
**End date:** 2025-08-18

## Sample identification

Substance	Method of taking a sample	Form
Trenbolone Enanthate	Sample provided by customer	Yellow powder in string bag


## Results

Substance	Sample name	Content	Purity
Trenbolone Enanthate	TRE	-----	97%

## Research comment

The test sample was applied in the amount of 3  $\mu$ l to the BioBasic 8 Thermo Scientific column. During the course of the analysis with the method a linear gradient in the solutions of H<sub>2</sub>O and Acetonitrile with the addition of 0.1% trifluoroacetic acid, a peak of the sought substance appeared. Its purity, when compared to the reference chromatogram, is 97%. Height the measurement error is + - 1%. The actual state of the sample sent before the test is presented on the photo below

## Photo of the test sample

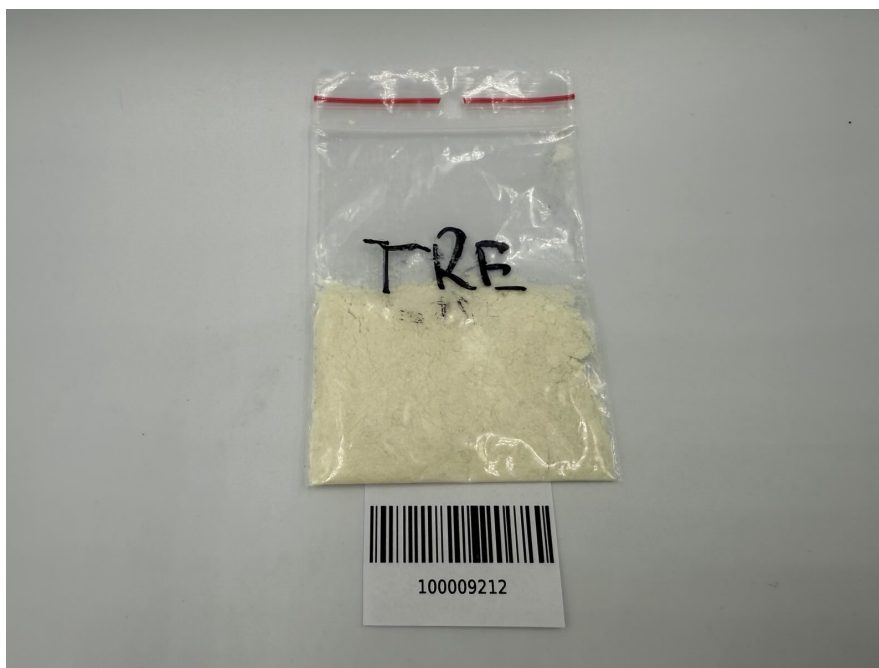

## Password

G73B4R9C

**Analiza Białek sp. z o.o.**  
**KRS:** 0000966168  
**NIP:** 8992922970  
**REGON:** 521751875

**Headquarters and Laboratory:**  
ul. Duńska 9, 54-427 Wrocław  
Budynek DELTA

**Lab technician:**  
Analysis and research specialist  
mgr Arkadiusz Zajac




ANALIZA BIAŁEK



100009212

## Chromatogram

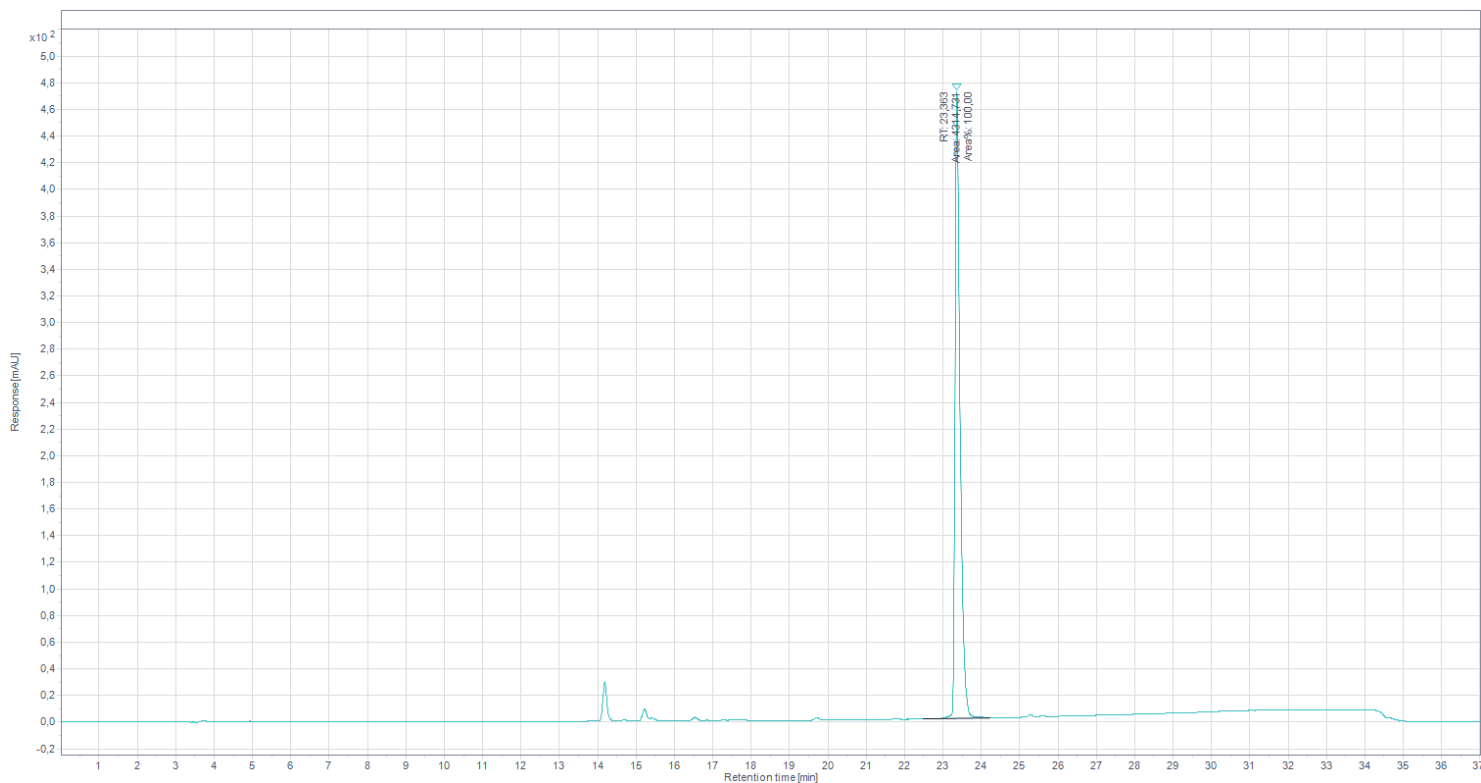

## Method

Time	H2O + 0,1% TFA	ACN + 0,1% TFA
0min	60%	40%
2min	60%	40%
27min	5%	95%
30min	5%	95%

## Password

G73B4R9C

**Analiza Białek sp. z o.o.**

**KRS:** 0000966168

**NIP:** 8992922970

**REGON:** 521751875

**Headquarters and Laboratory:**

ul. Duńska 9, 54-427 Wrocław  
Budynek DELTA

**Lab technician:**

Analysis and research specialist  
mgr Arkadiusz Zajac